

Mobile Application

You can remotely monitor all channels of the DVR through your mobile device. The required mobile application is from the DVR manufacturer and it supports mobile OS for both Windows mobile 5.0 above and Symbian.

Please confirm that the network function of the DVR has been activated before mobile connection: Main menu → Network Setup → HTTP Setup → Check the “Enable HTTP Server”.

1 Mobile Application, Installation and Operation for Symbian System

Mobile Device: Nokia, Sony Ericsson...etc.

System requirement:

GPRS/ 3G must be provided from your telecom service.

 
Mobile device that supports GPRS/ 3G protocol and Java cldc1.0/midp 2.0 environment.

1.1 Mobile Application Installation

Please follow the steps shown below to perform the mobile device surveillance function.

Step 1: You need to install the mobile application called “**DVRH264.jar**” into your mobile device. The application can be downloaded from the CD that packed with DVR through Bluetooth or USB cable.

Step 2: Install the application software “**DVRH264.jar**” in your mobile device. It might be installed automatically after downloading; otherwise, select it from the downloading file for installation.

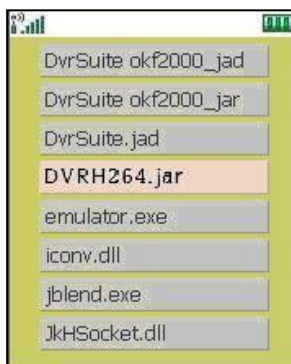

1.2 Mobile Application Operation

After the installation, enter Program Files menu in your mobile device to run a file called “**H264 MIDlet**”.

Select “Menu” at the right lower corner of your mobile screen, 4 commands, **Login Add Modify** and **Delete**, will show up.

1.2.1 Add New Login DVR

To log into the DVR, you need to enter the logging-in DVR information. Find “**Add**” under the “Menu” then enter logging-in DVR’s IP address, Port number, account name and password. Press “**Add**” to save this information after entering.



1.2.2 Logging onto the DVR

 
Use the Login command to log onto a DVR and monitor live images. If multiple DVRs have been added to the mobile application, they will be listed by name, you can select one to log onto.

 
A confirmation message might show up for a network charge before connection. The fee rate will depend on the telecom company and package fee that you go with.

Network connectivity will take some time. It will be affected by networking environment and bandwidth flow. Live image will show up after a successful connection.



3

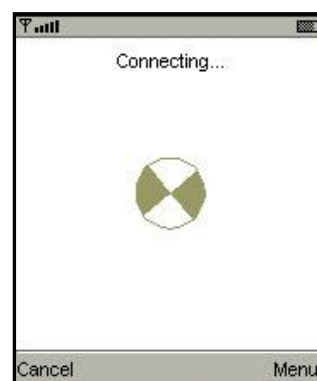




PS. Live images can not be displayed in your mobile when the recoding is set to off on local DVR.

1.2.3 Modify the Login Information of the DVR

 You can use “**Modify**” command to change the login information of the DVR. The dialogue is identical to that of “Add” command.



1.2.4 Delete the Login Information of the DVR

“Delete” command can be used to remove the DVR information when it is no longer useful. Select the DVR on the name list, then choose “Delete”.



1.3 Live Monitoring Operation

This paragraph describes some operation under the LIVE monitoring mode in your mobile device.


1.3.1 Scroll the Image

You can use the keypad on your mobile device to scroll the image when it is oversized.

Key	Action
2	Scroll Up
4	Scroll Left
6	Scroll Right
8	Scroll Down

1.3.2 Image Quality Setup

 Select “Quality” under the “Menu”. There will be 5 levels for you to choose: Low, Normal, Middle, High and Highest.



1.3.3 Channel Display

Select **“Single”** under the **“Menu”**, all channels will be listed for you to choose from.



PS. Live images can not be displayed in your mobile when the recoding is set to off in local DVR.


1.3.4 Size of Image



The screen size of different mobile device can be different. You can select “**Size**” under the “Menu” to choose from “**Original**” or “**Fit Screen**” to resize the display image.

Item	Description
Original	The image will be shown in original size.
Fit Screen	The image will be shown to fit the screen.

 1.3.5 Rotate the image

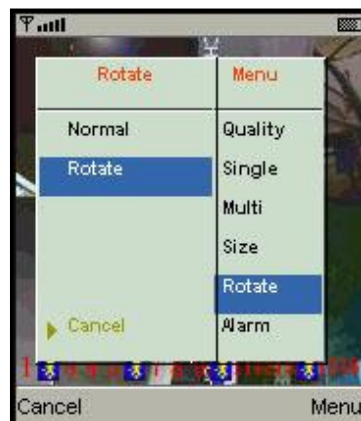




Live image can be displayed by normal image or rotate to 90 degrees. Select **“Rotate”** under the **“Menu”** for this operation.

1.3.6 Alarm



This application will not only allow user to remotely monitor through mobile device but receive the alarm that has been triggered by events such as Motion Detected, Sensor Triggered and Vloss.

Select the “Alarm” under the “Menu” to switch this function on or off.

Item	Description
	Motion detected
	Sensor triggered
	Video loss

2 Mobile Application Installation and Operation for Windows Mobile System

There are two kinds of applications for Window Mobile OS: JPEG compression and H.264 compression. The one for H.264 compression can transfer both audio and video signal to your mobile device.

System Requirement:

Mobile device OS : Windows mobile system 5.0 and above.

 
Mobile device need to support internet: GPRS / 3G / Wifi... etc.

2.1 Mobile Application Installation

Please follow the steps shown below to perform the mobile device surveillance function on your mobile device (mobile phone, PDA ...etc).

Step 1: The mobile application called “**Jrviewer.CAB**” and “**H264Pocket.CAB**” need to be installed in your mobile device. The application can be downloaded directly from the manufacturer’s website to your mobile or; alternatively, it can be transferred to your mobile device from the CD that is packed with DVR through Bluetooth or USB cable.

Step 2: Install the application software “**Jrviewer.CAB**” and “**H264Pocket.CAB**” in your mobile device, two folders named “**Jrviewer**” and “**H264Pocket**” will be created. It might be installed automatically after downloading; otherwise, select it from the downloading file for installation.

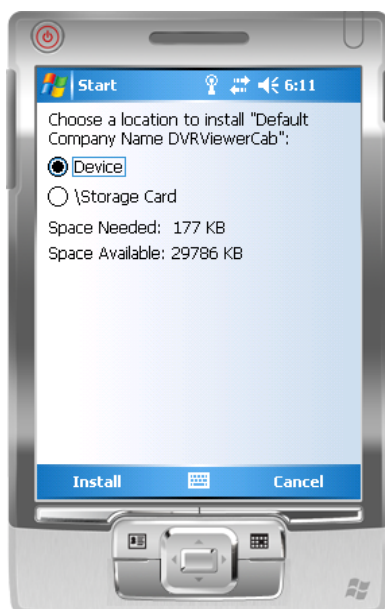


2.2 Mobile Application Operation

After the installation, enter the Program Files menu in your mobile device to run files named “**Jrviewer**” and “**H264Pocket**”.


This application allows you to remotely logon and monitor the DVR. Press “**OK**” to bring up the operation menu; see chart the below for further information.

Item	Function	Description
Add	Add login DVR	Enter DVR’s name, IP address, Port, Account user, Password then press “ OK ”
Login	Logon DVR	·Choose the DVR that you’d like to logon , then press “ OK ” · PS. Live image can not be displayed in your mobile when the recoding is off. · PS. Network connectivity will be affected by networking environment and bandwidth flow. The fee rate will depend on the telecom company and package fee you go with.
Modify	Modify Login DVR	Choose DVR, press “ Modify ”, and press” OK ” to save change.
Delete	Delete Login DVR	Choose DVR and press” Delete ” to delete the DVR info.

 The operation of Jrviewer

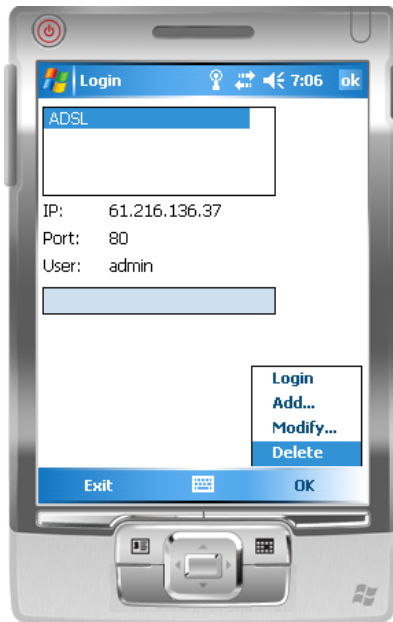

The operation of H264Pocket

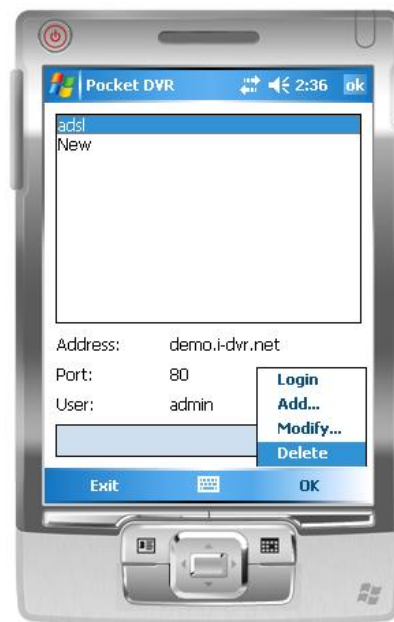 










 2.3 Operation under the LIVE monitoring

 After successful logon to the DVR, press “View” to bring up operation menu. You can choose the channel, resize the image, choose the quality, and turn On/ Off the status bar, alarm, full screen display....etc

 2.3.1 jrviewer Operation under the LIVE monitoring












Item	Function	Description								
Channel 1~16	Display for CH 1~16	Choose from CH1~16 to display								
Screen	Size of image	Original : image size as original Stretch : stretch the size as full screen Fit: resize the image to fit the screen								
Quality	Quality	Change the quality of image. Please note the better quality, the slower data transfer rate.								
Status Bar	Status Bar	Graphical icons indicated below will be shown on the status bar if there is event such as motion detected, sensor triggered and video loss to be detected on any channel. You can also uncheck the “ Status Bar ” to inactivate this function. <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>Icon</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td></td> <td>Motion Detect</td> </tr> <tr> <td></td> <td>Sensor Trigger</td> </tr> <tr> <td></td> <td>V-Loss</td> </tr> </tbody> </table>	Icon	Description		Motion Detect		Sensor Trigger		V-Loss
Icon	Description									
	Motion Detect									
	Sensor Trigger									
	V-Loss									
Alarm	Alarm	Alarm through your mobile device can be triggered if there is event to be detected. You can also uncheck the “Alarm” under the “View” to inactivate this function.								

   2.3.2 Operation under the LIVE monitoring for H264 Pocket



Item	Function	Description
Channel 1~16	Display for CH 1~16	Choose from CH1~16 to display. CH1~4 can receive audio signal.

Status Bar	Status Bar	<p>Graphical icons indicated below will be shown on the status bar if there is event such as motion detected, sensor triggered and video loss to be detected on any channel. You can also <input type="checkbox"/> uncheck the “Status Bar” to inactivate this function.</p> <table border="1" data-bbox="842 465 1190 663"> <thead> <tr> <th data-bbox="842 465 938 510">Icon</th> <th data-bbox="938 465 1190 510">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="842 510 938 562"></td> <td data-bbox="938 510 1190 562">Motion Detect</td> </tr> <tr> <td data-bbox="842 562 938 613"></td> <td data-bbox="938 562 1190 613">Sensor Trigger</td> </tr> <tr> <td data-bbox="842 613 938 663"></td> <td data-bbox="938 613 1190 663">V-Loss</td> </tr> </tbody> </table>	Icon	Description		Motion Detect		Sensor Trigger		V-Loss
Icon	Description									
	Motion Detect									
	Sensor Trigger									
	V-Loss									
Alarm	Alarm	<p>Alarm through your mobile device can be triggered if there is event to be detected. You can also <input type="checkbox"/> uncheck the “Alarm” under the “View” to inactivate this function.</p>								
Full Screen	Full screen display	<p><input checked="" type="checkbox"/> Check this function to choose one channel to display in full screen.</p>								